

PM-RX4 RECEIVER

quick set-up guide



1 power the receiver, then briefly press the «prog» button. The 2nd LED should light up to indicate the programming mode.



2 press briefly the «CH» button to select a relay; repeat to move to next relay. Colour LEDs light up to indicate the engaged relay.



3 keep the «CH» pressed for approx. 2 sec. to select a relay, then briefly press «prog» to choose a relay mode.



4 briefly press «prog» to select the right mode; LEDs indicate the selected mode (see below), then press twice a transmitter button to record.



○ ● ○ ○ ○ ○	○ ○ ○ ○ ○	entering programming mode
○ ● ○ ○ ○ ○	● ○ ○ ○ ○	Relay 1 selected
○ ● ○ ○ ○ ○	○ ● ○ ○ ○	Relay 2 selected
○ ● ○ ○ ○ ○	○ ○ ● ○ ○	Relay 3 selected
○ ● ○ ○ ○ ○	○ ○ ○ ● ○	Relay 4 selected
○ ● ● ● ● ●	○ ● ○ ○ ○	mode : «on» (relay 2)
○ ● ○ ● ● ●	○ ● ○ ○ ○	mode : «off» (relay 2)
○ ● ● ○ ● ●	○ ● ○ ○ ○	mode : «timer» (relay 2)
○ ● ○ ○ ● ●	○ ● ○ ○ ○	mode : «toggle» (relay 2)
○ ○ ● ● ○ ○	○ ● ○ ○ ○	mode : «push button» (relay 2)

«timer» mode : after step 4, the receiver clock starts ticking. Press «prog» to stop the clock. When pressing the button, the relay shall stay closed during the recorded time.